


TCLNXTWEARG

QUICK START GUIDE

SAVE
PAPER
SAVE
TREES

PLEASE CONSIDER THE
ENVIRONMENT BEFORE PRINTING

Contents

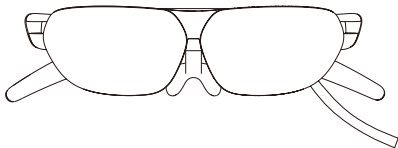

TCL NXTWEAR G Glasses



Corrective Lens Frame




3 Nose Pads



Cleaning Cloth

TCL NXTWEAR G Glasses


Front decorative lenses

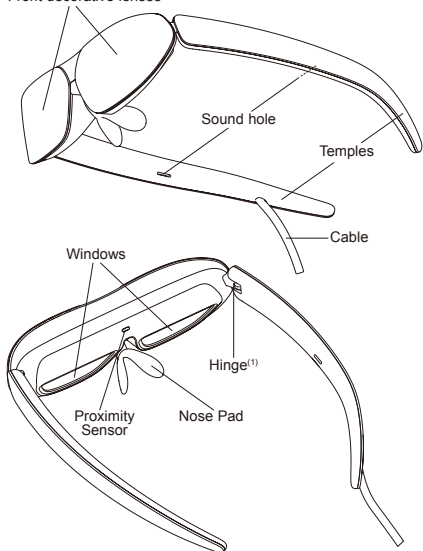

⁽¹⁾ The Hinge has a limited amount of flexibility. Please be careful not to over-extend the temples to avoid damaging them.

Selecting the Nose Pad

Select a nose pad that best fits your nose shape, and install it onto the Glasses.

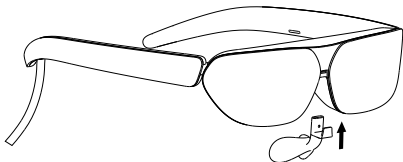


You may slightly adjust the position and width of the nose pad, according to your personal preference.



Note: It is recommended that you avoid frequent adjustments and vigorous activities, which may cause the nose pad to break.


Prescription Lenses (If Needed)

If necessary, please bring the Corrective Lens Frame to your local optical store to purchase suitable correction lenses. Then magnetically attach them onto the inner side of the Glasses.

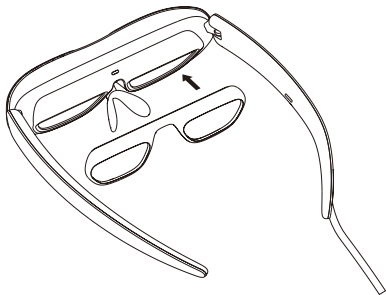

Connecting to the mobile phone

Connect the cable of the Glasses to the USB Type-C connector of your mobile phone.

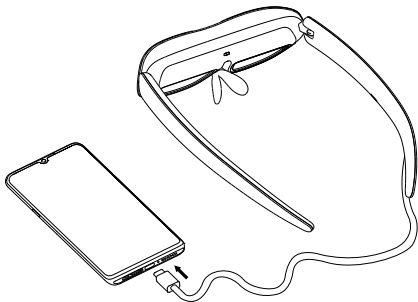

If your device is equipped with USB Type-C With DisplayPort Alternate Mode, you may connect the Glasses with the device directly. Please download and install the **Smart Glasses** app from the website: <https://www.tcl.com/au/en/mobile-support.html>.


Smart Glasses app provides the following functions:

1. Brightness adjustment
2. 2D/3D mode switch
3. Product firmware Update

Tip: The maximum brightness will be adjusted according to your device's OTG output capacity.

Wearing the Glasses

When putting on the Glasses, open the temples completely and slide onto your face from your forehead to ears, as in illustration below.

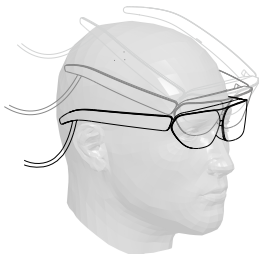

Notes:

- Do not bend the temples when they open outwards.
- Please make sure that the temples are fully open before wearing to avoid pinching your hands or hair during this process.

Warning

To use TCL NXTWEAR G Glasses, users must read the entire user manual to become familiar with the features of this product before using it. Failure to use this product in a safe and responsible manner within its intended purpose could result in personal injury or damage to the product or other property.

This product is not intended for use by children under the age of 14 without direct adult supervision.

Disclaimer

Congratulations on purchasing our TCL NXTWEAR G Glasses.

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your phone and the Glasses or specific carrier services.

TCL Communication Ltd. shall not be legally responsible for such differences.

Safety information

TO REDUCE THE RISK OF PERSONAL INJURY, DISCOMFORT OR PROPERTY DAMAGE, PLEASE ENSURE THAT YOU HAVE READ THE BELOW SAFETY INFORMATION CAREFULLY BEFORE USING OUR TCL NXTWEAR G GLASSES.

Use only in a safe environment.

To prevent possible hearing damage, do not listen at high volume levels for long periods.

Do not use these Glasses during sudden or intensive activity.

If your Glasses feel hot to the touch or are uncomfortably warm, stop using and allow them to cool down.

Immediately discontinue using these Glasses if you are experiencing eye strain or dizziness.

Please immediately stop using these Glasses if they are damaged.

Do not expose to liquid.

Consult your doctor before using these Glasses. Do not use these Glasses if you are sick, fatigued, under the influence of intoxicants/drugs, or are not feeling generally well.

Do not squeeze these Glasses during use to avoid damage to the Glasses or cause the lenses to become extruded which could risk damaging the wearer's face.

Stop using these Glasses if you notice swelling, itchiness, skin irritation or other discomforts of your skin that is in contact with them. If symptoms persist, please contact a doctor.

Do not use strong chemicals, cleaning agents or strong detergents to clean the Glasses, otherwise it may lead to material changes, thus affecting eye health. Please use a clean, dry, soft cloth to wipe the Glasses.

Please stop using the Glasses and disconnect all connections or cables with other equipment before cleaning and maintenance.

Do not let children or pets bite the Glasses to avoid injury or failure of the Glasses.

Do not place these Glasses in direct sunlight, such as car wash dashboard or window sill.

Do not treat these Glasses as ordinary domestic waste.

Please comply with the local ordinance for these Glasses and support recycling initiatives.

These Glasses are not equipped with prescription spectacle lenses by default, users who need corrective lenses should purchase them by themselves.

These Glasses are not a waterproof product, please do not use them in water or rain.

General information

- **Internet address:** <https://www.tcl.com/au/en/mobile-support.html>. On our website, you will find our FAQ (Frequently Asked Questions) and Smart Glasses app etc.
- **Manufacturer:** TCL Communication Ltd.
- **Address:** 5/F, Building 22E, 22 Science Park East Avenue, Hong Kong Science Park, Shatin, NT, Hong Kong

TCLNXTWEARG



CJB68B002AAA